

ThinkPad Setup

Config

Network

Item Specific

Wake On LAN	[Disabled]
UEFI IPv4 Network Stack	[Enabled]
UEFI IPv6 Network Stack	[Enabled]
UEFI PXE Boot Priority	[IPv4 First]
Wake by WiGig Dock	[Disabled]

AC Only: Wake On LAN function works when AC is attached.
AC and Battery: Wake On LAN function works with both AC and battery.
Note that AC is required with multicast packet type Wake On LAN.
Wake On LAN function does not work with Hard Disk Password set.

F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults
Esc Exit ←→ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit

ThinkPad Setup

Config

USB

Item Specific Help

USB UEFI BIOS Support **[Enabled]**
Always On USB **[Disabled]**

Enable/Disable UEFI BIOS support for USB. **[Disabled]** Disables boot with USB diskette, USB memory key and USB optical drive. This frees 16KB of high memory for loading DOS device drivers. **[Enabled]** Allows boot with USB diskette, USB memory key or USB optical drive.

F1

Help

↑↓

Select Item

+/-

Change Values

F9

Setup Defaults

Esc

Exit

←→

Select Menu

Enter

Select ▶ Sub-Menu

F10

Save and Exit

ThinkPad Setup

Config

Keyboard/Mouse

Item Specific Help

TrackPoint	[Enabled]
Trackpad	[Enabled]
Fn and Ctrl Key swap	[Disabled]
Fn Sticky Key	[Disabled]
F1-F12 as Primary Function	[Enabled]

Enables or disables built-in TrackPoint. [Disable] Built-in TrackPoint is disabled. [Enable] Built-in TrackPoint is enabled.

F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults
Esc Exit ↔ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit

Lenovo

ThinkPad Setup

Config

Display	Item Specific Help
<p>Boot Display Device [ThinkPad LCD] Shared Display Priority [Display on dock] Total Graphics Memory [256MB]</p> <p>Boot Time Extension [Disabled]</p>	<p>Select a display device for boot.</p> <p>[DisplayPort] Mini DisplayPort (TM) connector on ThinkPad. [HDMI] HDMI connector on ThinkPad. [Display on dock] Display connectors on dock. Boot screen is cloned to all displays on dock.</p>

F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults
Esc Exit ←→ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit

Lenovo



ThinkPad Setup

Config

Power

Item Specific Help

Intel (R) SpeedStep technology	[Enabled]
Mode for AC	[Maximum Perform]
Mode for Battery	[Battery Optimiz]
Adaptive Thermal Management	
Scheme for AC	[Maximize Perfo]
Scheme for Battery	[Balanced]
CPU Power Management	[Enabled]
Power On with AC Attach	[Disabled]
Disable Built-in Battery	[Enter]

This selects the mode of Intel(R) SpeedStep technology at runtime. Maximum Performance - Always highest speed
Battery Optimized - Always lowest speed
Disabled - No runtime support, highest speed

F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults
Esc Exit ↔ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit

ThinkPad Setup

Config

Beep and Alarm

Password Beep [Disabled]
Keyboard Beep [Disabled]

Item Specific Help

Enable this option to have a beep sound when the system is waiting for a power-on, hard disk, or supervisor password. Different beeps will be sounded when the entered password matches or does not match the configured password.

F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults
Esc Exit ↔ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit

Lenovo

ThinkPad Setup

Config

CPU

Item Specific Help

Intel (R) Hyper-Threading Technology
[Enabled]

[Enabled] This setting enables additional CPU threads. These threads appear as additional processors but share some resources with the other threads within a CPU.
[Disabled] This setting enables only one thread within each execution core unit.

F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults
Esc Exit ↔ Select Menu Enter Select ► Sub-Menu F10 Save and Exit

Lenovo

X260



ThinkPad Setup

Security

Security Chip	Item Specific Help
Security Chip Selection Security Chip	[Intel PTT] [Enabled]
▶ Security Reporting Options	[Discrete TPM] Use a discrete TPM chip with TPM 1.2 mode.
Clear Security Chip	[Enter] [Intel PTT] Use Intel(R) Platform Trusted Technology with TPM 2.0 mode.
Physical Presence for Provisioning	[Disabled]
Physical Presence for Clear	[Enabled] Note: Intel(R) PTT can be used with Microsoft (R) Windows 8 (R) or later operating system.

F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults
 Esc Exit ↔ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit

Lenovo

X260



ThinkPad Setup
Security

Memory Protection

Item Specific Help

Execution Prevention **Enabled**

Enabled: If your OS supports Data Execution Prevention, this setting can prevent virus/worm attacks that create memory buffer overflows by running code where only data is allowed.
Disabled: Normal state
Note: reset to disabled if your required applications can't run.

F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults
Esc Exit ←→ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit

Lenovo

X260

Esc

FnLk



F1



F2



F3



F4



F5



F6



F7



F8



F9



F10



F11



F12

Pos1

Ende
Einfg

Entf

ThinkPad Setup

Security

Virtualization

Intel (R) Virtualization Technology **[Enabled]**
Intel (R) VT-d Feature **[Enabled]**

Item Specific Help

When enabled, a UMM can utilize the additional hardware capabilities provided by Intel (R) Virtualization technology.

F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults
Esc Exit ↔ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit

Lenovo

X260

Esc FnLk F1 F2 F3 F4 F5 F6 F7 F8 F9 F10 F11 F12 Pos1 Ende Eing Entf

ThinkPad Setup

Security

I/O Port Access

Item Specific Help

Ethernet LAN	[Enabled]
Wireless LAN	[Enabled]
Wireless WAN	[Enabled]
Bluetooth	[Enabled]
USB Port	[Enabled]
Memory Card Slot	[Enabled]
Smart Card Slot	[Enabled]
Integrated Camera	[Enabled]
Microphone	[Enabled]
Fingerprint Reader	[Enabled]
WiGig	[Enabled]

Select whether to enable or disable Ethernet LAN device.
[Enabled]
Enables use of Ethernet LAN device.
[Disabled]
Disables use of Ethernet LAN device and keeps it disabled in the OS environment.

F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults
Esc Exit ↔ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit

Lenovo

X260



ThinkPad Setup

Security

Internal Device Access

Item Specific Help

Bottom Cover Tamper Detection **[Disabled]**
Internal Storage Tamper Detection **[Disabled]**

[Enabled]
Enable the tamper detection. If detected, Supervisor Password is required to boot the system.
[Disabled]
Disable the tamper detection.

Bottom Cover Tamper Detection will not take effect unless Supervisor Password is enabled.

F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults
Esc Exit ↔ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit

Lenovo

X260

Esc

FnLk

F1

F2

F3

F4

F5

F6

F7

F8

F9

F10

F11

F12

Pos1

Ende
Eintg

Entf

ThinkPad Setup

Security

Secure Boot Configuration

Item Specific Help

Secure Boot

[Disabled]

Platform Mode

User Mode

Secure Boot Mode

Standard Mode

Reset to Setup Mode

[Enter]

Restore Factory Keys

[Enter]

Clear All Secure Boot Keys

[Enter]

Enables or disables Secure Boot feature.
[Enabled]

Prevent unauthorized operating systems from running at boot time.
[Disabled]

Allow to run any operating systems at boot time.

Note: Enabling Secure Boot requires to set the startup setting to "UEFI Only" and "CSM Support: No".

F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults
Esc Exit ←→ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit

ThinkPad Setup

Security

Intel (R) SGX

Item Specific Help

Intel (R) SGX Control [Software Controlled]
- Current State Disabled

Change Owner EPOCH [Enter]

This option enables or disables Intel (R) Software Guard Extensions (SGX) function.

If Software Controlled is selected, SGX will be controlled by SGX application for UEFI boot OS.

F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults
Esc Exit ←→ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit

Lenovo



ThinkPad Setup

Main

Config

Date/Time

Security

Startup

Restart

▶ Boot

Network Boot	[PCI LAN]
UEFI/Legacy Boot - CSM Support	[UEFI Only] [No]
Boot Mode	[Quick]
Option key Display	[Enabled]
Boot device List F12 Option	[Enabled]
Boot Order Lock	[Disabled]

Item Specific Help

F1 Help
Esc Exit

↑↓
↔

Select Item
Select Menu

+/-
Enter

Change Values
Select ▶ Sub-Menu

F9
F10

Setup Defaults
Save and Exit

Lenovo

Pos1

Ende
Eintg

ThinkPad Setup

Main

Config

Date/Time

Security

Startup

Restart

UEFI BIOS Version	R02ET74W (1.47)
UEFI BIOS Date (Year-Month-Day)	2020-09-15
Embedded Controller Version	R02HT33W (1.15)
ME Firmware Version	11.8.83.3874
Machine Type Model	20F6CT01WW
System-unit serial number	[REDACTED]
System board serial number	[REDACTED]
Asset Tag	No Asset Information
CPU Type	Intel(R) Core(TM) i7-6500U CPU
CPU Speed	2.500GHz
Installed memory	8192MB
UUID	[REDACTED]
MAC Address (Internal LAN)	[REDACTED]
Preinstalled OS License	[REDACTED]
UEFI Secure Boot	Off
OA3 ID	[REDACTED]
OA2	Yes

F1	Help	↑↓	Select Item	+/-	Change Values	F9	Setup Defaults
Esc	Exit	↔	Select Menu	Enter	Select ▶ Sub-Menu	F10	Save and Exit

Lenovo

Esc

F1

F2

F3

F4

F5

F6

F7

F8

F9

F10

F11

F12

Pos1

Ende

Entf