

Erledigt

# Deutsche Anleitung Ozmosis Bios erstellen/bearbeiten...etc...

Beitrag von „thomaso66“ vom 14. Oktober 2014, 22:30

Teil 3

So um aus aus \*FFS Dateien wieder den Ursprung zu machen siehe Bilder es ist im Grunde immer das selbe. 😊

Als erstes schaue ich mir an was der Subtype ist.

Freeform wird zu bin (Theme.bin) oder einfach als \*.plist speichern bzw. umbenennen

Will ich aus der OzmosisDefault.ffi wieder eine OzmosisDefault.plist machen muss ich nur die RAW Sektion Extrahieren

The screenshot shows the UEFITool interface with a file structure on the left and a context menu open over the 'Raw section' of the 'User interface section'. The context menu options include 'Extract as is...', 'Extract body...', 'Rebuild', 'Insert into...', 'Insert before...', 'Insert after...', 'Replace as is...', 'Replace body...', and 'Remove'. The 'Raw section' contains a 'User interface section' with various entries like 'Ozmosis', 'OzmosisBiosTheme', 'HermitShellX64', 'SncEmulatorKext', 'DisableKext', 'InjectorKext', 'CpuSensorsKext', 'LpcSensorsKext', 'GpuSensorsKext', and 'VoodooHdaKext'.

Messages  
Unicode text "ozmosis" found in User interface section at offset 00000000  
Unicode text "ozmosis" found in PE32+ image section at offset 0001fd38  
Unicode text "ozmosis" found in PE32+ image section at offset 0001fdcb  
Unicode text "ozmosis" found in PE32+ image section at offset 000200e0  
Unicode text "ozmosis" found in User interface section at offset 00000000  
Unicode text "ozmosis" found in User interface section at offset 00000000

Einfach die Extrahierte Datei nach \*.Plist umbenenn

DXE Driver wird zu \*.EFI

So kann man aus der Ozmosis.ffs ein Ozmosis.Efi machen und von der EFI Partition starten!

The screenshot shows the UEFITool interface. The main window displays a tree view of the firmware structure. The 'User interface section' is selected, and a context menu is open over it. The menu options include 'Extract as is...', 'Extract body...', 'Rebuild', 'Insert into...', 'Insert before...', 'Insert after...', 'Replace as is...', 'Replace body...', and 'Remove'. The 'Messages' pane at the bottom shows several messages indicating the location of 'Ozmosis' text in the image sections.

Name	Action	Type	Subtype	Text
0F92960F-2080-4659-8657-915A8001B0C8		File	DXE driver	Ip4Dxe
61AFA223-8AC8-4440-9A85-762B1B785156		File	DXE driver	Mtftp4Dxe
10EE5462-B207-4A4F-AB08-CB522ECAA3A4		File	DXE driver	Udp4Dxe
80D9176D-E087-4F0E-8A84-3F998311F930		File	DXE driver	Dhcp6Dxe
8F92960E-2080-4659-8657-915A8001B0C8		File	DXE driver	Ip6Dxe
61AFA251-8AC8-4440-9A85-762B1B785156		File	DXE driver	Mtftp6Dxe
10EE544E-B207-4A4F-AB08-CB522ECAA3A4		File	DXE driver	Udp6Dxe
58000900-305D-11D7-883A-00500473D4E8		File	DXE driver	UHC0
84EAAA1-29A1-11D7-883B-00500473D4E8		File	SMM module	USBRT
4C006C09-198A-4617-8483-609194A1ACFC		File	DXE driver	USBINT13
199FD111-0785-4132-A983-1F66573F0080		File	DXE driver	GenericComponentsSmm
51871023-7C5C-4D5B-4109-29F5073A3F88		File	DXE driver	OnoffchargeDXE
1555ACF3-8D87-1458-B668-AB694567890A		File	DXE driver	OnoffchargeSMM
BE216B48-38C4-4535-A6CA-5DCASB43A0DF		File	DXE driver	SmiVariable
132EC73B-3025-4F8F-B193-8ACB50EFB089		File	DXE driver	QFlash
56B78419-7103-4D0E-83F4-F3546BD21E40		File	DXE driver	EzFileBrowser
A56897A1-A77F-4600-840B-22B8A801FA9A		File	DXE driver	SmmRuntime
4DCBF9BA-0EC1-4208-8A09-01555694F6CF		File	DXE driver	GbtCustomizeButtonSmm
534A6A34-C778-4A56-8E0C-CB9A8080660C		File	DXE driver	RTCMnakeup
629FA771-C081-568A-A599-1986811859E0		File	DXE driver	x1x4Switch
08A8432-93CC-48D2-9F34-3496CAF92185		File	DXE driver	SmartFanCtrlDXE
7D1686A9-1EE3-446C-825C-5A26F449CE52		File	DXE driver	OemLOG0
86EE84E1-3375-41A1-AFBA-8478D29663AA		File	Freeform	MyOemLogo1
86EE84E2-3375-41A1-AFBA-8478D29663AA		File	Freeform	MyOemLogo2
8FE285C9-5817-4F8F-9375-89614A78E199		File	DXE driver	OEMDXE
78B28099-618B-11D5-9A5D-0090273FC140		File	Freeform	
16271FCA-55D9-4A33-93FC-5A3EB128DE86		File	DXE driver	CRB0XE
221F1D4F-034C-48EA-B28B-87A967280607		File	DXE driver	CRBSMI
C084562C-6064-48A3-A081-C8D35E828920		File	DXE driver	CsplibDxe
1FA1F39E-FEFF-4AAE-BD7B-38A070A38609		File	DXE driver	PartitionDxe
4CF484CD-135F-4FDC-BAFB-1AA104848036		File	DXE driver	HfsPlus
961578FE-8687-44C3-AF35-6BC705CD281F		File	DXE driver	EnhancedFat
99F2839C-57C3-411E-ABC3-ADE526709680		File	Freeform	OzmosisDefaults
AAE65279-0761-41D1-BA13-4A3C1383603F		File	DXE driver	Ozmosis
DXE dependency section				DXE dependency
Compressed section				Compressed
PE32+ image section				PE32+ image
User interface section				User interface
AC25206-0CF9	Extract as is...	File	Freeform	OzmosisBlackTheme
C57406B7-0151	Extract body...	File	Application	HermisShellV64
DADE1001-1831	Rebuild	File	Freeform	SmcEmulatorKext
DADE1002-1831		File	Freeform	DisablerKext
DADE1003-1831		File	Freeform	InjectorKext
DADE1006-1831	Insert into...	File	Freeform	CpuSensorsKext
DADE1007-1831	Insert before...	File	Freeform	LpcSensorsKext
DADE1008-1831	Insert after...	File	Freeform	GpuSensorsKext
DADE1009-1831		File	Freeform	VoodooHdaKext
User interface section				User interface
17080572-377F-44EF-8F	Replace as is...	File	Pad	
8A0A450A-BEE9-42C1-95	Replace body...	File	Raw	
899487D7-99FE-4308-9A	Remove	File	DXE driver	Setup

Messages

```
Unicode text "ozmosis" found in User interface section at offset 00000000
Unicode text "ozmosis" found in PE32+ image section at offset 0001fd38
Unicode text "ozmosis" found in PE32+ image section at offset 0001fdc8
Unicode text "ozmosis" found in PE32+ image section at offset 000200e8
Unicode text "ozmosis" found in User interface section at offset 00000000
Unicode text "ozmosis" found in User interface section at offset 00000000
```

So das soll es nun erstmal gewesen sein, sollten noch fragen offen sein einfach Fragen 😊