DSDT fix Z87MX-D3H (OZ167X)

Beitrag von "Huberer" vom 28. Februar 2016, 12:29

So, next try. I inserted your ssdt into the dsdt. Use the attached dsdt but remove your ssdt. Also attached is the AppleIntelCPUPowerManagementInfo.kext from PikerAlpha to check if speedstep is working. But it into EFI/Oz/Darwin/Extensions/Common/ and the dsdt into EFI/Oz/Acpi/Load/ (I guess you know where to put)

Reboot your system and with this command in Terminal

Code

1. cat /var/log/system.log | grep "AICPUPMI:"

you can check your CPU speedsteps and also iGPU P-states. Post the output here (I guess you only can make a screen shot with "cmd"+"shift"+"4" - only a part of the screen and not the whole).

Edit: Very important - remove your ssdt from EFI!!! (it's within dsdt)