

Erledigt

10.11.4 Installationsproblem mit Clover: Installer startet nicht - Rechner rebooted

Beitrag von „ich28“ vom 18. Mai 2016, 23:56

So dann fangen wir mit denn [BIOS Settings](#) an.

im oberen Reiter M.I.T

Advanced Frequency Setting -> Advanced CPU Core Settings -> CPU Enhanced Halt (C1E) -> Disable

CPU EIST Functions -> Disalbe

im oberen Reiter BIOS Features

Bootup NumLock State -> (OFF)

Security Option -> (System)

Full Screen LOGO Show -> (Enable)

Fast Boot -> (Disable)

Windows 8/10 Features -> (Windows 8/10)

CSM Support -> (Enable)

LAN PXE Boot Option ROM -> (Disable)

Storage Boot Option Control -> (UEFI Only)

Other PCI Device ROM Priority -> (UEFI Only)

Network Stack -> (Disable)

System Mode State -> (Setup)

Secure Boot State -> (Disable)

im oberen Reiter Peripherals

Intel Platform Technology (PTT) -> (Disable)

Intel Display -> (Enable)

Audio LED -> Still Mode

Legacy USB Support -> Enable

XCHI Hand-off -> Enable

Port 60/64 Emulation -> Disable

USB Mass Storage Driver Support -> Enable

Security Device Support -> Disable

Serial Port 1 -> Disable
Intel Bios Support -> Disable
Sata Mode Selection -> ACHI
Link Speed -> Auto Negotiated

oben im Reiter Chipset

VT-d -> Disable
Internal Graphics -> Enable auf 64
Audio Controller -> Enable
PCH LAN Controller -> Enable
Wache on LAN -> Disable
High Precision Timer -> Disable
IOAPIC 24-119 Entries -> Disable

oben im Reiter der vorletzte

AC Back -> Always Off
Power On By Keyboard -> Disable
ErP -> Enable
Soft-Off by PWR-BTTN -> Instant-off
Power Loading -> Auto
Resume by Alarm -> Disable
Platform Power Management -> Disable

Speicher neu starten.