

Erledigt

Nvidia GTX 1060 wird nicht erkannt

Beitrag von „G.com“ vom 4. Oktober 2018, 23:31

Versuche es einmal damit.

Hier noch empfohlene [Bios Einstellungen](#) für dein Board.

Save & Exit → Restore Defaults : Yes
Advanced \ Integrated Peripherals → Network Stack : [Disabled]
Advanced \ Integrated Peripherals → Intel Serial IO : [Disabled]
Advanced \ USB Configuration → XHCI Hand-off : [Enabled]
Advanced \ USB Configuration → Legacy USB Support : [Auto]
Advanced \ Windows OS Configuration → MSI Fast Boot : [Disabled]
Advanced \ Windows OS Configuration → Fast Boot : [Disabled]
Overclocking → Extreme Memory Profile(X.M.P) : [Enabled]
Overclocking \ CPU Features → Intel Virtualization Tech : [Enabled]
Overclocking \ CPU Features → Intel VT-D Tech : [Disabled]
Boot → Boot mode select : [LEGACY+UEFI]

Dedicated graphics card:

Advanced \ Integrated Graphics Configuration → Initiate Graphic Adapter : PEG

(Optional) Wake hackintosh from sleep thru Input:

Advanced \ Wake Up Event Setup → Resume By USB Device : [Enabled]
Advanced \ Wake Up Event Setup → Resume From S3/S4/S5 by PS/2 Mouse : [Enabled]
Advanced \ Wake Up Event Setup → Resume From S3/S4/S5 by PS/2 Mouse : [Enabled]

@Quelle: hackintoshr.com