

# OpenCore Bootloader


Beitrag von „apfelnico“ vom 6. Mai 2020, 11:27

ExposeSensitiveData

- 0x01 — Expose printable booter path as an UEFI variable.
- 0x02 — Expose OpenCore version as an UEFI variable.
- 0x04 — Expose OpenCore version in boot picker menu title.
- 0x08 — **Expose OEM information** as a set of UEFI variables.

- 
- 0x0F beziehungsweise 15.

Wofür kann man diese Daten dann benutzen?

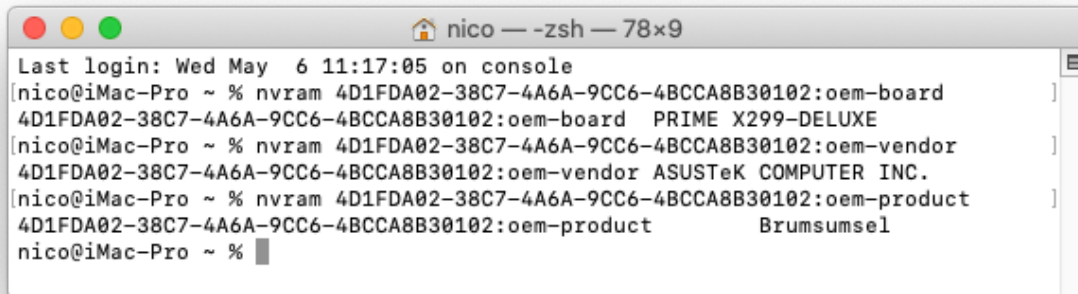

```
nico — -zsh — 78x9
Last login: Wed May 6 11:17:05 on console
[nico@iMac-Pro ~ % nvrAM 4D1FDA02-38C7-4A6A-9CC6-4BCCA8B30102:oem-board
4D1FDA02-38C7-4A6A-9CC6-4BCCA8B30102:oem-board PRIME X299-DELUXE
[nico@iMac-Pro ~ % nvrAM 4D1FDA02-38C7-4A6A-9CC6-4BCCA8B30102:oem-vendor
4D1FDA02-38C7-4A6A-9CC6-4BCCA8B30102:oem-vendor ASUSTeK COMPUTER INC.
[nico@iMac-Pro ~ % nvrAM 4D1FDA02-38C7-4A6A-9CC6-4BCCA8B30102:oem-product
4D1FDA02-38C7-4A6A-9CC6-4BCCA8B30102:oem-product Brumsumsel
nico@iMac-Pro ~ % █
```