

Erledigt

Bildschirm geht aus - Intel UHD 630

Beitrag von „al6042“ vom 19. Mai 2020, 19:02

[muell_mannbernd](#)

Gibt es in deinem BIOS unter "Chipset"->"System Agent Configuration" folgende Optionen?

» System Agent Configuration

Scroll to this item and press <Enter> to view the following screen:



Initiate Graphic Adapter (Auto)

This item allows you to select graphics controller to use as the primary boot device.

IGD Memory (64M)

This item shows the information of the IGD (Internal Graphics Device) memory.

DVMT/FIXED Memory (256M)

When set to DVMT Mode, the graphics chip will dynamically allocate system memory as graphics memory, according to system and graphics requirements.

Wenn ja, stelle sie wie folgt ein:

- Initiate Graphic Adapter = IGFX oder IGD oder IGPU oder Internal (je nachdem welcher der aufgeführten Texte auswählbar ist.
- IGD Memory = 64M
- [DVMT](#)/FIXED Memory = MAX
- IGD Multi-Monitor = Enabled

Unter "Security", das hoffentlich wie folgt aussieht, sollte "Secure Boot" dringend auf "Disabled" stehen:

Security Menu

This page enables you to set setup administrator password and user password.



System Mode state (Setup)

This item shows system mode setup or not.

Secure Boot state (Not Active)

This item allows you to enable or disable the secure boot state.

Secure Boot (Enabled)

This item is used to control the secure boot flow, it is possible only if system runs in User Mode.

Secure Boot Mode (Standard)

This item is used to select the secure boot mode.