


RX5700XT kein Multimonitoring

Beitrag von „al6042“ vom 9. Juni 2020, 23:46

So sieht das in meiner config.plist aus:

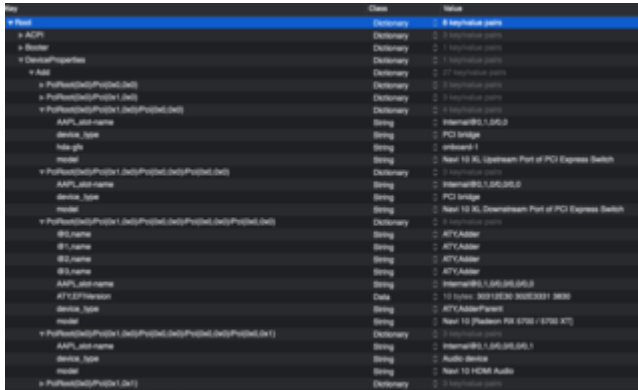

Key	Class	Value
<Root>	Dictionary	{}
<ACPI>	Dictionary	{}
<Booter>	Dictionary	{}
<DeviceProperties>	Dictionary	{}
<Add>	Dictionary	{}
<PCIRoot(0)/PciRoot(0)/Pci(01:00:00)>	Dictionary	{}
<AAPL,isa-name>	String	Internal/IO,1,00,0
<device_type>	String	PCI Bridge
<idn00>	String	idn00000000
<model>	String	Real 10 M, Upstream Port of PCI Express Switch
<PCIRoot(0)/PciRoot(0)/Pci(01:00:01)>	Dictionary	{}
<AAPL,isa-name>	String	Internal/IO,1,00,010
<device_type>	String	PCI Bridge
<model>	String	Real 10 M, Downstream Port of PCI Express Switch
<PCIRoot(0)/PciRoot(0)/Pci(01:00:02)>	Dictionary	{}
<device_type>	String	ATY,AtyAcr
<idn000>	String	idn00000000
<idn001>	String	idn00000000
<idn002>	String	idn00000000
<AAPL,isa-name>	String	Internal/IO,1,00,020,0
<ATI,EFirmware>	File	EFI/Boot/BOOT0000:00000000:0000
<device_type>	String	ATY,AtyAcr
<model>	String	Real 10 (Platform ID: 0100 - 0100 ATY)
<PCIRoot(0)/PciRoot(0)/Pci(01:00:03)>	Dictionary	{}
<AAPL,isa-name>	String	Internal/IO,1,00,030,0
<device_type>	String	Audio Device
<model>	String	Real 10 HDMI Audio
<PCIRoot(0)/PciRoot(0)/Pci(01:00:04)>	Dictionary	{}

Beigefügt auch der Auszug aus dem Export.

Mit welchem Editor arbeitest du an an deiner config.plist?