

Wie Powermanagement für alle Controller aktivieren ?

Beitrag von „Planschili“ vom 11. Juni 2020, 14:07

Hallo zusammen,

ist das normal, dass die anderen Controller für das PM disabled sind ? (siehe Foto Auszug Hackintool unter **ASPM**)

ich habe die nötigen files im ACPI ordner und im Bios steht zum Thema auch alles auf Auto



Sub-Device	Vendor	Vendor Name	Device Name	Class	Subclass
000000	000000	Intel Corporation	Intel Core Processor	Bridge	Host bridge
000000	000000	Intel Corporation	Intel Core Processor	Bridge	PCI bridge
000000	000000	Intel Corporation	Intel Core Processor	Generic system peripheral	System peripheral
000000	000000	Intel Corporation	Intel Core Processor	Serial bus controller	Serial bus controller
000000	000000	Intel Corporation	Intel Core Processor	Digital processing controller	Digital processing controller
000000	000000	Intel Corporation	Intel Core Processor	Mass storage controller	Mass storage controller
000000	000000	Intel Corporation	Intel Core Processor	Communication controller	Communication controller
000000	000000	Intel Corporation	Intel Core Processor	Network controller	Network controller
000000	000000	Intel Corporation	Intel Core Processor	Bridge	PCI bridge
000000	000000	Intel Corporation	Intel Core Processor	Bridge	ISA bridge
000000	000000	Intel Corporation	Intel Core Processor	Display controller	Display controller
000000	000000	Intel Corporation	Intel Core Processor	Memory controller	Memory controller
000000	000000	Intel Corporation	Intel Core Processor	Multimedia controller	Multimedia controller
000000	000000	Intel Corporation	Intel Core Processor	Multimedia controller	Audio device
000000	000000	Intel Corporation	Intel Core Processor	Serial bus controller	Serial bus controller
000000	000000	Intel Corporation	Intel Core Processor	Mass storage controller	Non-Volatile memory controller