

Gigabyte Z390 DESIGNARE: OpenCore-EFI-Ordner und Anleitung

Beitrag von „sevennova“ vom 17. Juni 2021, 16:42

[JimSalabim](#)

First of all, thanks to JimSalabim for sharing all the time, I currently have two problems,

1: During the use of the mac, an accidental card will appear, and then it will quickly enter the crash. If you click the system sleep during the process of entering the crash, and then wake up the system, it can be used normally again, but it is still unavoidable to encounter It suddenly freezes and then crashes quickly. (The 0.6.6 version does not have this problem).

2: In recent versions of Opencore, the local area network is always connected to the NAS hard disk, and the speed of copying a single file has changed from 100M/s to 50M/s. It is not clear why, the previous Opencore version has no problem (specifically which version is no longer Test), but tested under Windows10 system, the speed can reach 100M/s, so it should not be the problem of the network cable, I am thinking about whether it is the problem of the mac system network driver:), I hope everyone can help me, thank you!