

# 4 Ssd richtig verbinden an mein Hacki?

Beitrag von „kaneske“ vom 9. Dezember 2021, 21:41

So wie es hier steht...

**Installation Notices for the PCIe4, M.2 and SATA Connections:**  
The availability of the SATA connections may be affected by the type of device installed in the M.2 sockets. The NCM, CPU connector shares bandwidth with the SATA0-3 connectors. The NCM, SB connector shares bandwidth with the SATA0-4, 5. The MCP, SB connector shares bandwidth with the PCIe4 connector. Refer to the following tables for details.

• NCM, CPU

Port #	Connector	SATA0	SATA1	SATA2	SATA3	SATA4	SATA5
1	NCM	✗	✗	✗	✗	✗	✗
2	CPU	✗	✗	✗	✗	✗	✗
3	SB	✗	✗	✗	✗	✗	✗
4	SB	✗	✗	✗	✗	✗	✗

• NCM, SB

Port #	Connector	SATA0	SATA1	SATA2	SATA3	SATA4	SATA5
1	NCM	✗	✗	✗	✗	✗	✗
2	CPU	✗	✗	✗	✗	✗	✗
3	SB	✗	✗	✗	✗	✗	✗
4	SB	✗	✗	✗	✗	✗	✗

• MCP, SB

Port #	Connector	SATA0	SATA1	SATA2	SATA3	SATA4	SATA5	PCIE4
1	MCP	✗	✗	✗	✗	✗	✗	✗
2	SB	✗	✗	✗	✗	✗	✗	✗
3	SB	✗	✗	✗	✗	✗	✗	✗

• Available in "No-embed"  
• The MCP, SB connector supports only PCIe 4.0

Benutzt du den PCH m.2 Slot sind SATA0-3 aktiv und 4-5 deaktiv.