

# **Ryzentosh - Ryzen 5 3600 - ASUS PRIME B450M-K II - AMD 6600 XT (Er Startet nicht)**

**Beitrag von „Ninjiopl“ vom 19. November 2022, 15:13**

So i go to the BIOS and your right "Above 4G Decoding" was Disabled, so I Enable it, but the other settings were alright