

Asus-Prime X299 Deluxe OS Sequoia installieren

Beitrag von „apfelnico“ vom 25. Februar 2025, 23:17

[thommel](#)

EIST - Enabled!

Advanced/CPU Conf

ganz runter scrollen -> MSR Lock Control - Disabled!

System Agent (SA) Configuration

VT-d - Enabled!

PCI Subsystem Settings

Above 4G Decoding - Enabled!

Re-Size BAR Support - Auto!

Boot

Fast Boot - Disabled!

Above 4G - On

First VGA 4G - Above_4G

Launch CSM - Disabled