


Intel AX200 kein Bluetooth

Beitrag von „Bob-Schmu“ vom 17. Juni 2024, 23:01


[Zitat von Riddle](#)

Vllt kann jemand von euch nochmal drüber schauen & mir sagen was man besser machen könnte.

Nimm mal das <https://github.com/ic005k/OCAuxiliaryTools> Tool, per

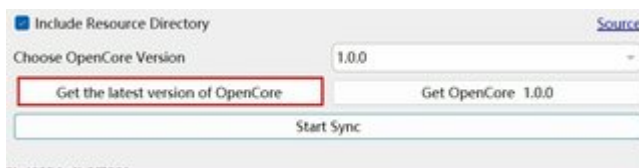

OC auf die neuste Version aktualisieren und die Fehler

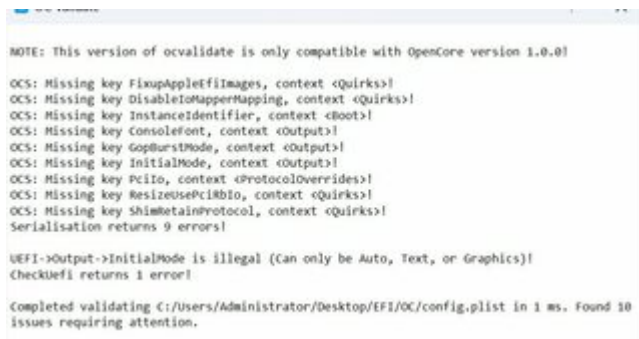

in deiner config berichtigen.

Wenn du nur macOS Sonoma nutzen willst und später macOS Sequoia aber keine früheren Versionen, dann kannst du auch die Patche entfernen.

Identifier	Name	Comment
1	ax200_bt_patch	ax200 Force open_core_pnp_package to constant base openPkg() 10.14.12.0
2	ax200_bt_patch	ax200 Force open_core_pnp_package to constant base openPkg() 10.15.11.0
3	ax200_bt_patch	ax200 Force open_core_pnp_package to constant base openPkg() 10.15.12.0
4	ax200_bt_patch	ax200 Force open_core_pnp_package to constant base openPkg() 10.14
5	ax200_bt_patch	ax200 _smmpage_pnp_patch Remove offset 10.15.0
6	ax200_bt_patch	ax200 _spat_bt_catcher_inject Set CRUX page offset at 10.15.0
7	ax200_bt_patch	ax200 _spat_bt_generic_inject Remove normal offset 10.15.0
8	ax200_bt_patch	ax200 _spat_bt_generic_inject Register offset offset with constant 10.15.0
9	ax200_bt_patch	ax200 _spat_bt_generic_inject Set Register 10.15.0
10	ax200_bt_patch	ax200 _spat_bt_generic_inject Check offset offset 10.15.0
11	ax200_bt_patch	ax200 _spat_bt_inject Localize offset to hardware offset 10.15.0
12	ax200_bt_patch	Localize offset Register to hardware offset 10.15.0
13	ax200_bt_patch	ax200 _spat_bt_inject Force CPU offset offset 10.15.0
14	ax200_bt_patch	ax200 _spat_bt_inject Force CPU offset offset 10.15.0
15	ax200_bt_patch	ax200 _spat_bt_inject Force CPU offset offset 10.15.0
16	ax200_bt_patch	ax200 _spat_bt_inject Force CPU offset offset 10.15.0
17	ax200_bt_patch	ax200 _spat_bt_inject Force CPU offset offset 10.15.0
18	ax200_bt_patch	ax200 _spat_bt_inject Force CPU offset offset 10.15.0
19	ax200_bt_patch	ax200 _spat_bt_inject Force CPU offset offset 10.15.0
20	ax200_bt_patch	ax200 _spat_bt_inject Force CPU offset offset 10.15.0
21	ax200_bt_patch	ax200 _spat_bt_inject Force CPU offset offset 10.15.0
22	ax200_bt_patch	ax200 _spat_bt_inject Force CPU offset offset 10.15.0
23	ax200_bt_patch	ax200 _spat_bt_inject Force CPU offset offset 10.15.0

Da du Windows nutzt, würde ich das noch setzen, wenn Windows dein Gerät nicht als Mac erkennen soll.

UpdateSMBIOSMod

CustomSMBIOSGuid

https://www.reddit.com/r/hacki...install_change_my_system/